




FOR PROFESSIONAL RESULTS

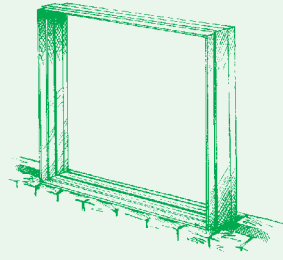


1. Locate plastic cavity closer to the required level.

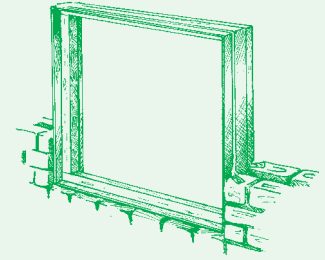


2. Fit dummy frame to inside of cavity closer and build up brickwork using ties every three courses. Remove timber brace when brickwork reaches lintel height.

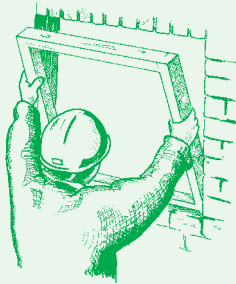


3. After brickwork is completed, remove dummy frame and move to next opening.

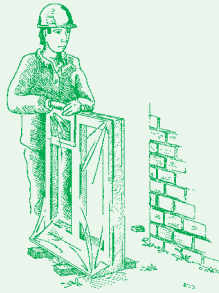


4. Window will be delivered to site shrink wrapped and complete with fixing cleats (supplied loose).

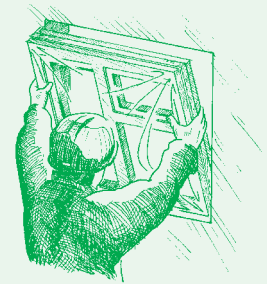


5. Screw the fixing cleats onto the window frame and offer the window into the cavity closer from inside or outside. Pack the window from underneath, so that the window head butts up to the lintel.

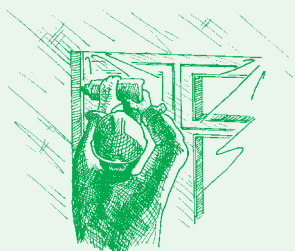

6. Fix the cleats into the reveal, ensuring that the window is square in the opening.

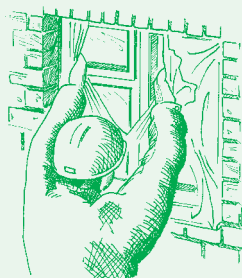

7. Prior to occupation, remove shrink wrap, taking care not to damage window.

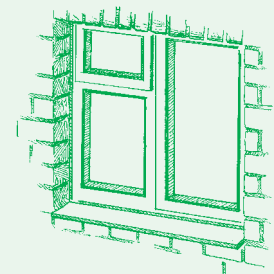

8. The window is now complete.